


Suggested Drain Installation Guide for Stone Vessels

Suggested Madeli Model #:

Drain: **91008**

General Diagram

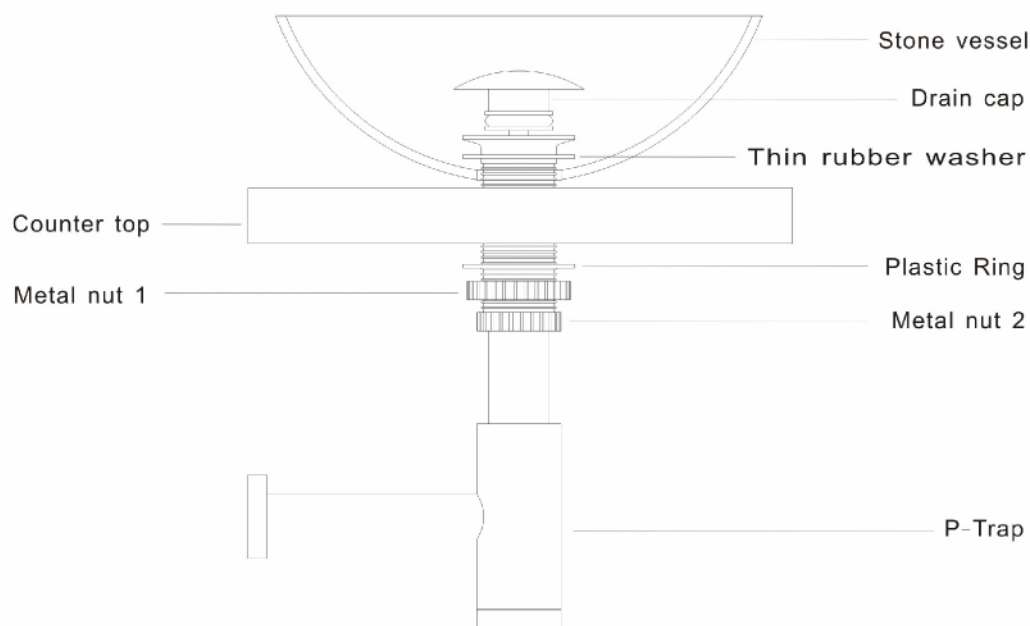

Step 1

Position and drill a 1 3/4" hole for the drain on the counter top.

Step 2

Drain assembly picture

Place a generous amount of plumber's putty under drain cap and insert whole drain body inside the bowl and through the countertop.

Step 3

From under the drain, insert the plastic Ring below the counter top. Screw on And tighten the metal nut. Remove excess Plumber's putty.

Step 4

Attached p-trap to tailpiece